

Classic Integra Link Entrance Matting


Installation Guide

Install Classic Integra Link entrance matting incorporating high performance open grid polymeric tiles, with 100% polyamide non-static tufted pile inserts, and heel-proof scraper panels. If required, install Integra INFR17 aluminium mat frame to suit recess, or INFR1180 ramp frame for surface mounted applications, in accordance with manufacturer's recommendations.

Warning

Please check the product supplied, and read the entire instructions before starting any installation, then follow the steps.

Do not alter pre-cut frames without consulting Classic Architectural Group. Any alterations to mats or frames supplied may incur expensive additional costs and/or re-manufacture of the matting. All costs to be borne by the customer.

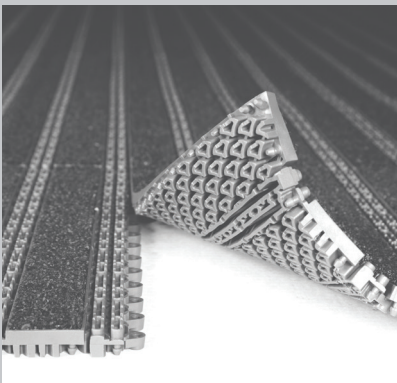

Installation

Recessed Application

1. Install Classic Integra Frame in an oversized recess, locate, align and level frame accurately to adjoining floor levels, in accordance with manufacturer's recommendations (as per frame installation guide).
2. If necessary, prepare a suitable mortar mixture and screed off to the top face of the horizontal leg of the frame. Prior to install, ensure the created matwell is clean and free from all construction debris, and the subfloor is flat, sound and free of contaminants. **WARNING!** Mats will be damaged by uneven mat wells.
3. Accurately check measure mat and frame.
4. In cases of shaped or circular mats, a RIGID template should be taken of the mat area and the template will be used to shape the mat as required. All shaping should be carried out by qualified and trained personnel - please refer to Classic Architectural Group for assistance.
5. Remove the Classic Integra Link tiles from the packaging, and commence the assembly of the mat. The tiles can be easily joined together by locating the 'male' and corresponding 'female' connection using a rubber mallet to ensure a sound connection (Please note the direction of travel the mat ribs/panels are to run perpendicular to the direction of travel). Suggestion: Larger mats can be constructed in several sections. For example a good guide is no more than 4 tiles L-R and 14 tiles F-B. Keeping within these sizes will ensure ease of handling and maintenance.
6. Once the required size has been achieved, the Classic Integra Link mat can be carefully laid into the desired position, and trimmed to size using a sharp knife and straight edge.
7. Finally, ensure that the Classic Integra Link mat sections are placed tightly against one another, and each tile is properly connected, taking particular care that the edges of the mats are flush and are not presenting a tripping hazard.

Installation

Surface Mount Application

1. Install Integra Ramp Frame to required sides of matting in desired mat area in accordance with manufacturer's recommendations (as per frame installation guide).
2. Prior to installation, ensure the created matwell is clean and free from all construction debris, and the subfloor is flat, sound and free of contaminants. **WARNING!** Mats will be damaged by uneven mat wells. If necessary, prepare a suitable mortar mixture and screed off to the top face of the horizontal leg of the frame.
3. Assemble and fit the matting following procedure outlined in prior steps 3-7.