

Classic Integra Verse Entrance Matting


Installation Guide

Install Classic Integra Verse reversible entrance matting, featuring aluminium scraper bars with wiper strips. If required, install Integra INFR11 or INFR17 aluminium mat frame to suit recess, or INFR1180 ramp frame for surface mounted applications, in accordance with manufacturer's recommendations.

Warning

Please check the product supplied, and read the entire instructions before starting any installation, then follow the steps.

Do not alter pre-cut mats or frames without consulting Classic Architectural Group. Any alterations to mats or frames supplied may incur expensive additional costs and/or re-manufacture of the matting. All costs to be borne by the customer.

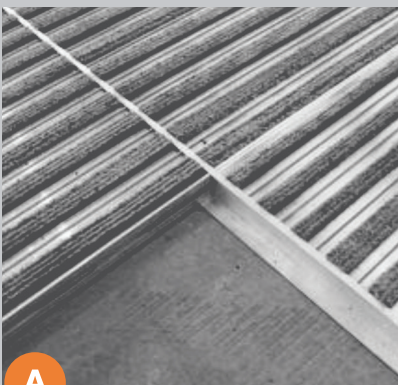

Installation

Recessed Application

1. Install Classic Integra Frame in an oversized recess, locate, align and level frame accurately to adjoining floor levels, in accordance with manufacturer's recommendations (as per frame installation guide).

2. Prior to installation, ensure the created matwell is clean and free from all construction debris, and the sub floor is flat, sound and free of contaminants. **WARNING!** Mats will be damaged by uneven mat wells. If necessary, prepare a suitable mortar mixture and screed off to the top face of the horizontal leg of the frame.

3. Accurately check and measure mat and frame.

4. In cases of shaped or circular mats, a RIGID template should be taken of the mat area and the template will be used to shape the mat as required. All shaping should be carried out by qualified and trained personnel - please refer to Classic Architectural Group for assistance.

5. Remove the Classic Integra Verse mat from the packaging, and commence the installation. Do not try to force a mat section into place. The process of installing factory made customised mats is straight forward and requires no special tools (Please note the direction of travel. The mat ribs are to run perpendicular to the direction of travel).

6. Classic Integra Verse products are loose laid, and there are no clips or joining pieces. Generally the mat will have been supplied in multiple rigid sections, and each section abuts naturally to each other.

7. Install each mat section as per layout drawing supplied. Each mat has a lettered/ numbered label attached and must be placed in the mat well (label on the top surface) to correspond with the layout drawing.

8. Place the first panel into the recess ensuring a good fit against the frame on all 3 sides, followed by the 2nd panel etc.

9. Where mats are over 2.4m in the L-R direction, mats will be made in multiple panels. Install the left hand panels first, then fit the 'T'-Bars in the inverted format as shown in Fig.A, then fit the centre panels, the next 'T'-Bar and the next panels etc. Each section abuts naturally to each other, and into the 'T'-Bar.

10. Finally, ensure that the Classic Integra Verse mat sections are placed tightly against one another, and each panel is properly fitted, taking particular care that the edges of the mats are flush and are not presenting a tripping hazard.

Installation

Surface Mount Application

1. Install Classic Integra Ramp Frame to all required sides of matting in desired mat are in accordance with manufacturer's recommendations (see frame installation guide).

2. Prior to installation, ensure the created matwell is clean and free from all construction debris, and the subfloor is flat, sound and free of contaminants. **WARNING!** Mats will be damaged by uneven mat wells. If necessary, prepare a suitable mortar mixture and screed off to the top face of the horizontal leg of the frame.

3. Assemble and fit the matting following procedure outlined in prior steps 3-8.