



classic
architectural group

For Every Step®


Installation Guide

EziHold Swivel Wall Mount Bike Rack



Wall Layout

- If racks are installed at offset heights, a minimum 400mm spacing is required (and to the edge of walls or other obstructions)
- The second rack will need to be offset by 300mm (see diagram)
- If racks are not installed at offset heights, then a minimum 700mm spacing is required (and to the edge of walls or other obstructions).

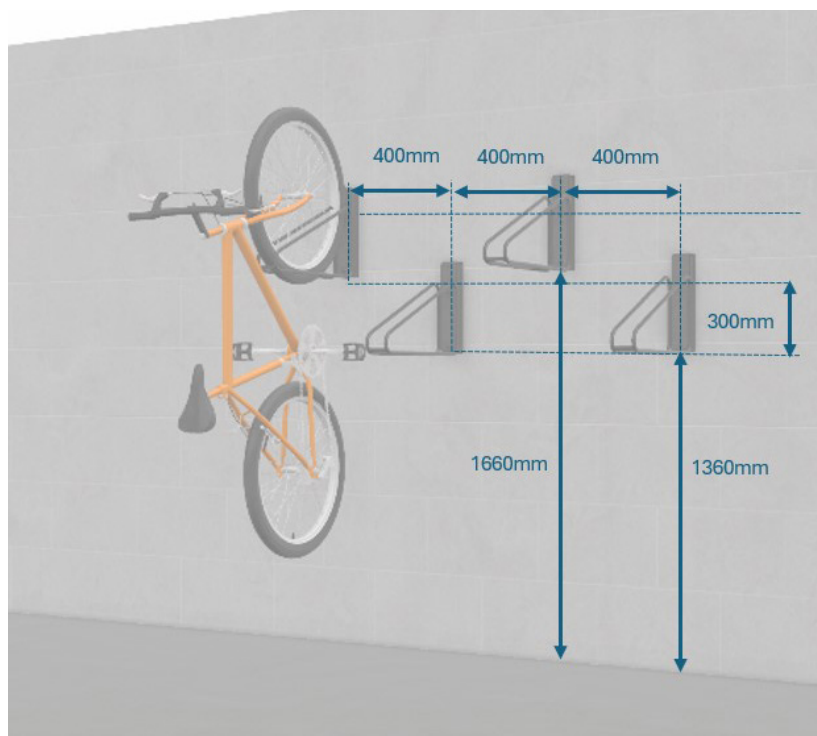



classic
architectural group


For Every Step®

Installation Guide

EziHold Swivel Wall Mount Bike Rack

Access & Clearance

- Racks are to be mounted with minimum clearance zones for user access
- A minimum of 1200mm clearance from the wall is required, and a further 1500mm minimum is needed, for an access aisle (see diagram below).

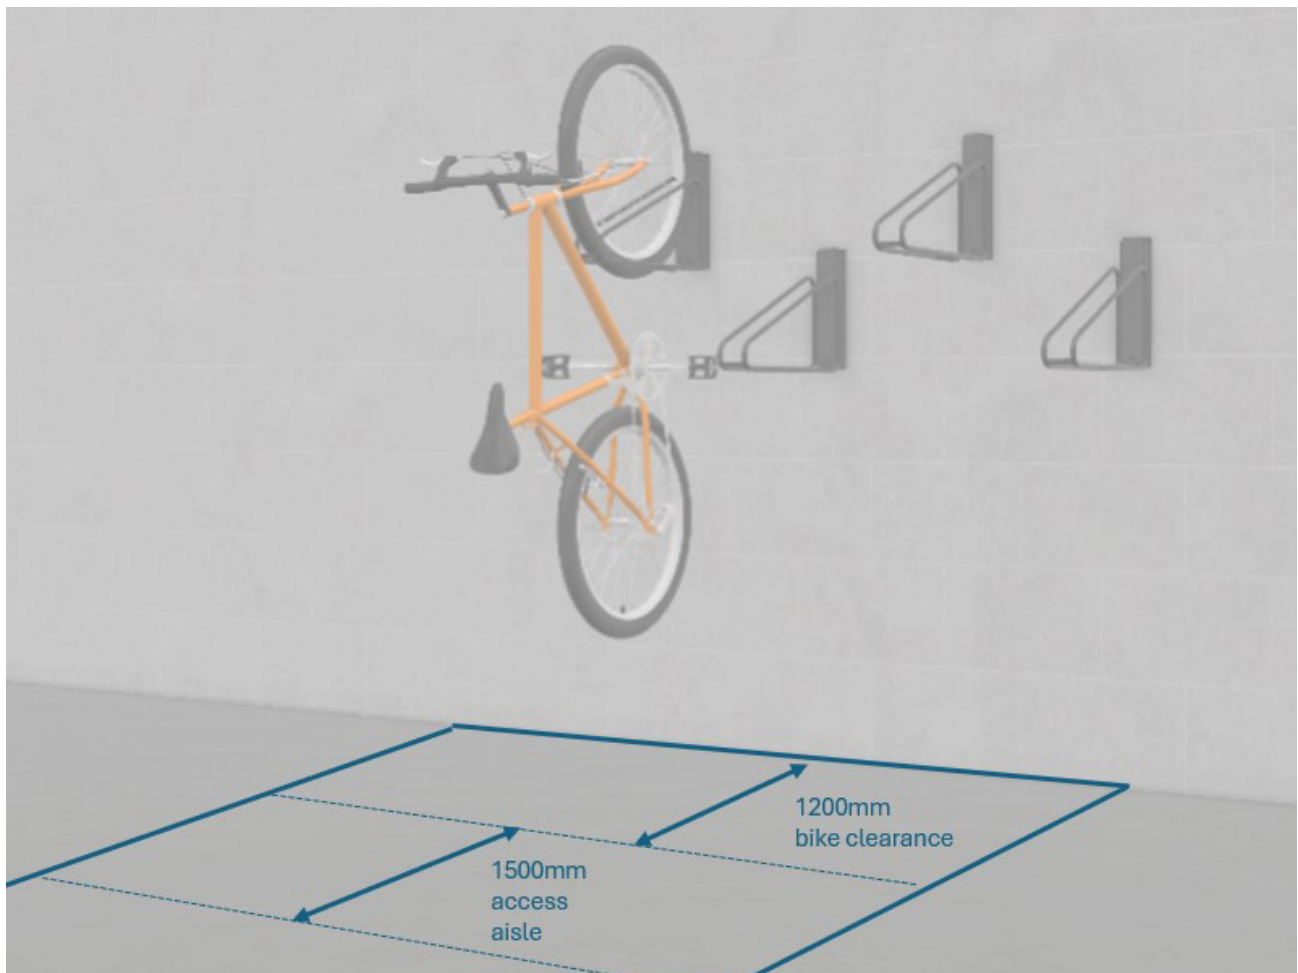



classic
architectural group

For Every Step®

Installation Guide

EziHold Swivel Wall Mount Bike Rack

Installation

- Locate center of bottom hole placement of the first wall rack
- Make a mark with pencil at approximately 1670mm from the floor to the first mounting hole position (this is the higher position)
- Hold rack straight, center hole over mark position, and mark the upper hole
- Remove rack and drill both holes
- Insert the screw bolts and secure in place
- The second rack will need to be offset by 300mm and a 400mm spacing between (see diagram on page 1)
- Repeat above steps until all racks are installed, alternating the lower and higher rack positions (as shown below)

